



Part Names - Main Unit

Front view

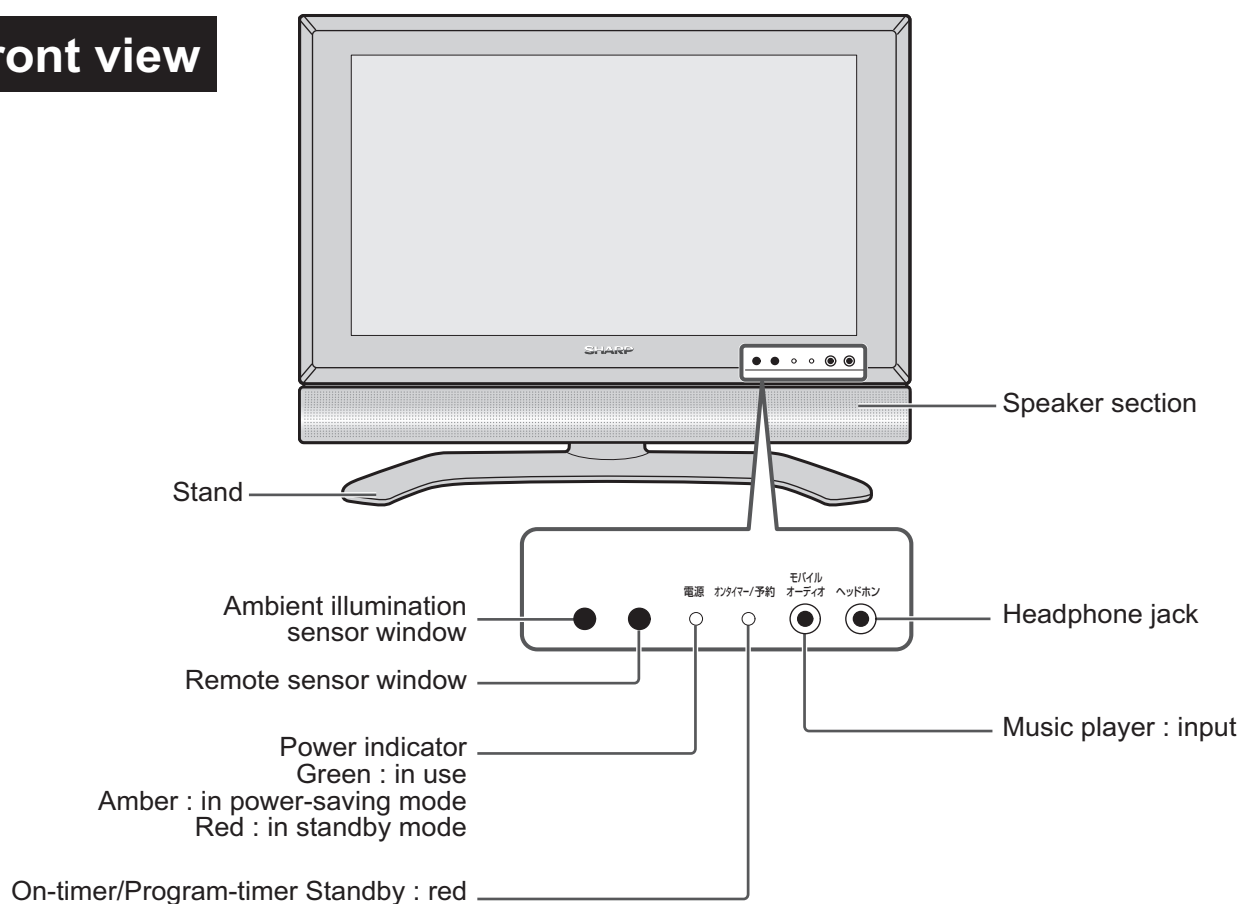


Top view

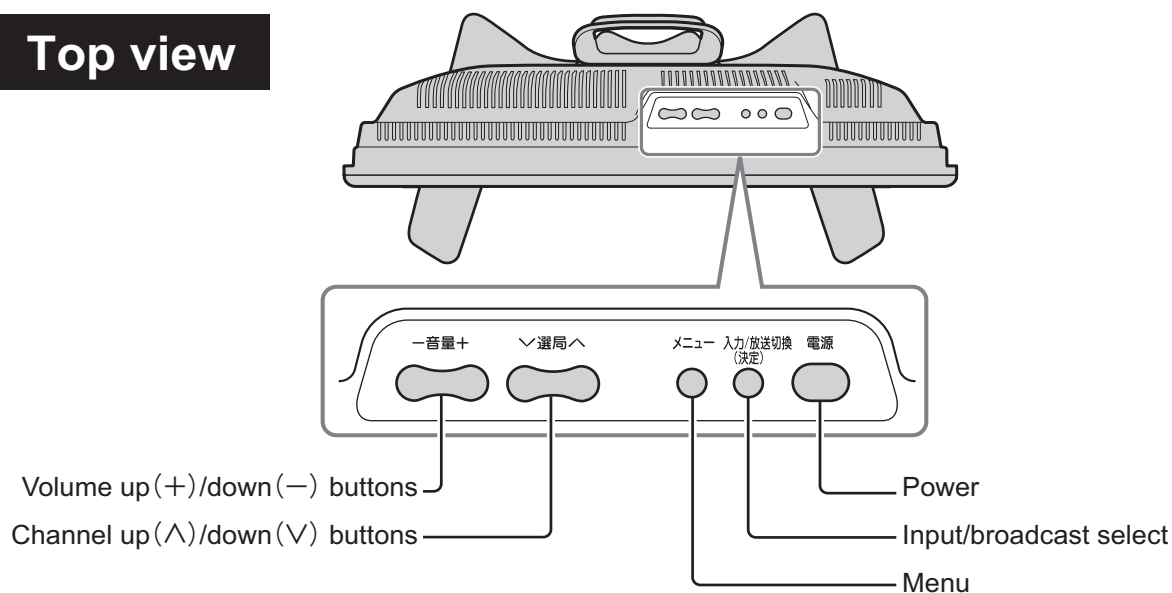

Part Names - Main Unit

Rear view

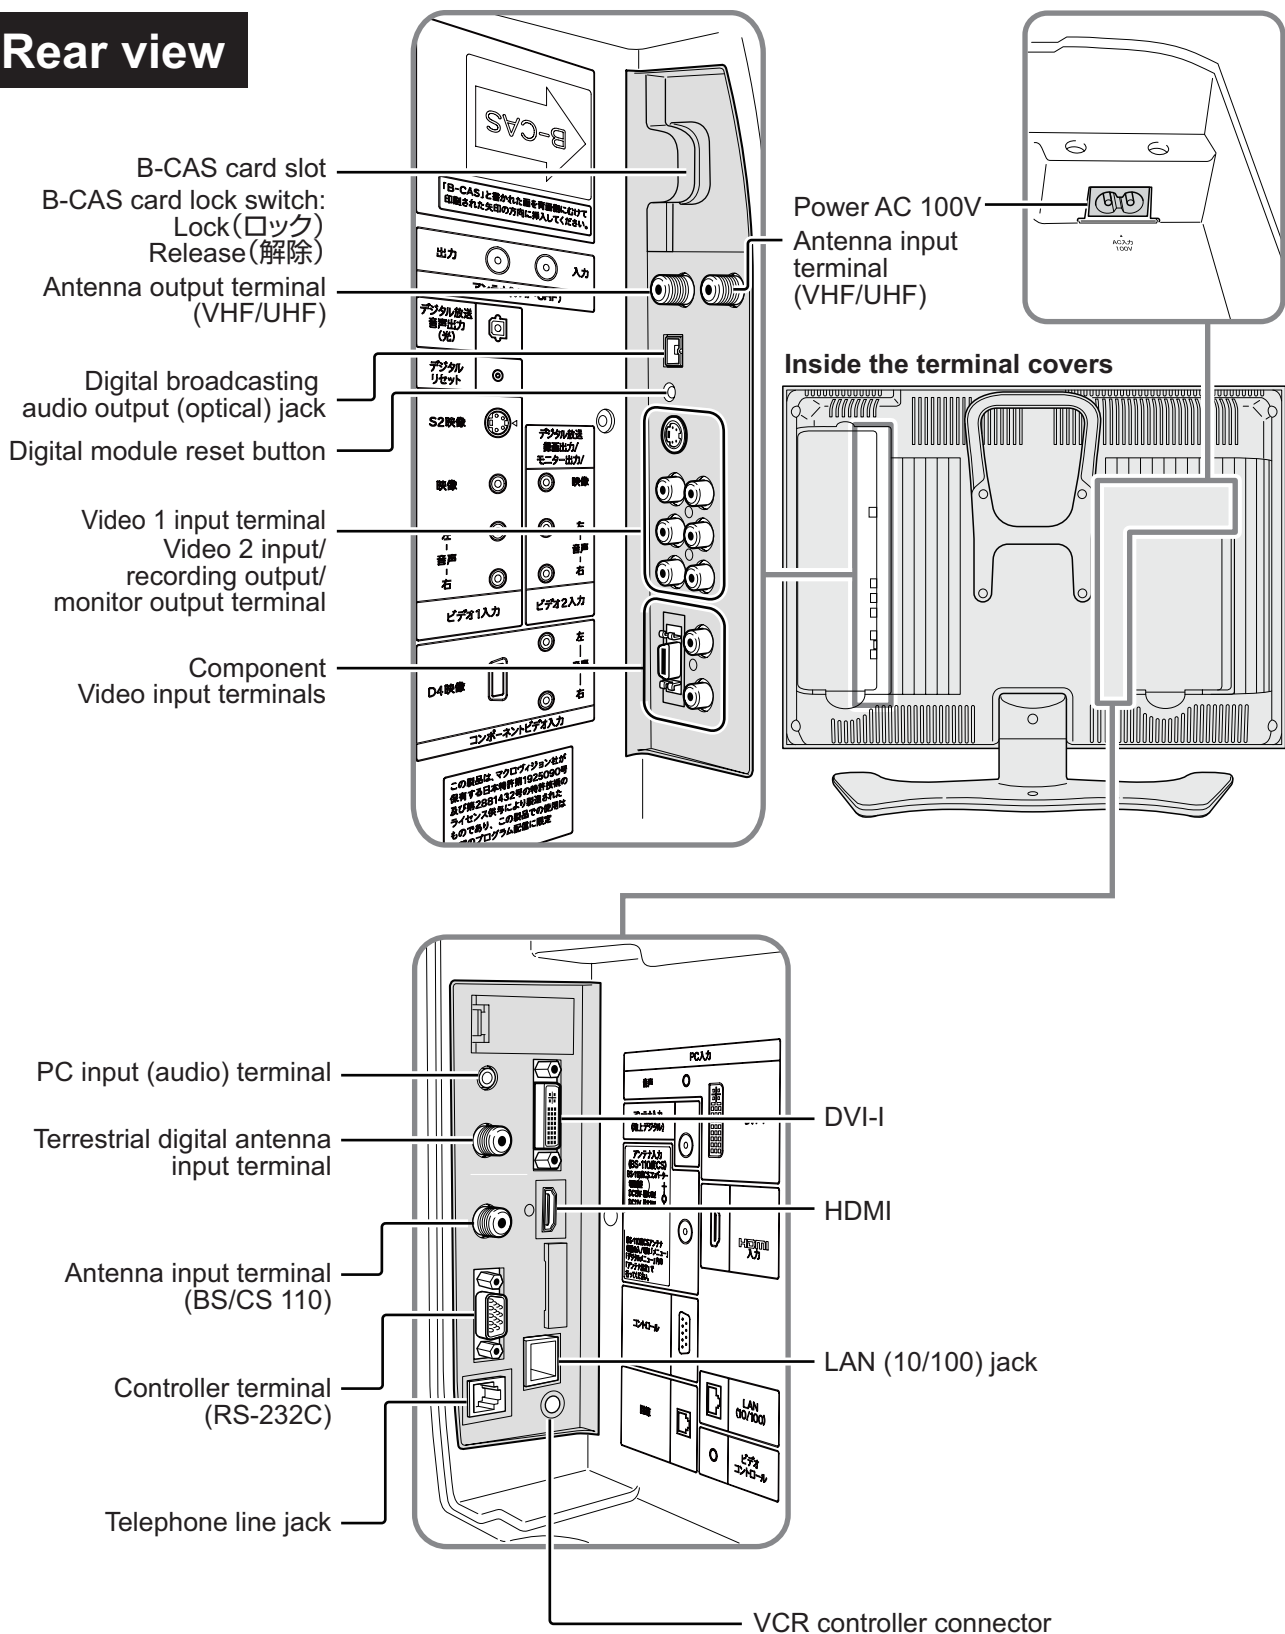

Part Names - Remote Control Unit

Cover closed

Display

Press to display or turn off the channel call, clock, etc.

Active/Standby

Press to engage the TV set in the active or standby mode.

CATV

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

Digital terrestrial select

Press to select the digital terrestrial broadcast.

* Use this button after the TV set is tuned to receive digital terrestrial broadcasts.

Analog broadcast select

Press to select the analog broadcast.

d (linked data broadcast)

(Japanese)

Press to call the data broadcast linked with the current digital TV program.

Volume up (+)/down (-)

Press to adjust volume.

Mute

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

EPG

(Japanese)

Program info

(Japanese)

Cursor (up, down, left, right)

Use to select a menu item, column, etc.

Enter/Confirm

Press to confirm a selected setting or menu item.

Finish

Press to turn off the EPG display, or finish menu operation etc.

Note

This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

Color (blue, red, green, yellow)

Use to operate EPGs and data program screens.

Sleep timer

Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

Screen mode

Press to select the desired screen size.

PC/AV

Select the desired display mode. (Personal computer or TV)

Digital channel number input

When selecting a digital channel by entering the 3-digit channel number, press this button first, then enter the channel number with the channel select buttons (1-10/0).

Channel select

- Press to select a channel after selecting the desired network (terrestrial analog [地上A], terrestrial digital [地上D], BS, CS) and media (TV, radio, or data).
- Use to input a number for various settings.

BS select

Press to select the BS digital broadcast.

CS select

Press to select the CS digital broadcast.

Media select

Press to select the desired media (TV, radio, or data).

Channel up (^)/down (v)

Press to select channels in the current broadcast media and CATV channels in ascending or descending order.

* CATV channels are factory set to be skipped.

External input select

Press to select the desired input.

Other on-air programs (Japanese)


Press to display or turn off the EPG for other digital broadcast programs.

Menu (Japanese)


Press to display or turn off the menu screen.

Return


Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you input selection is wrong item or input the wrong number, etc.

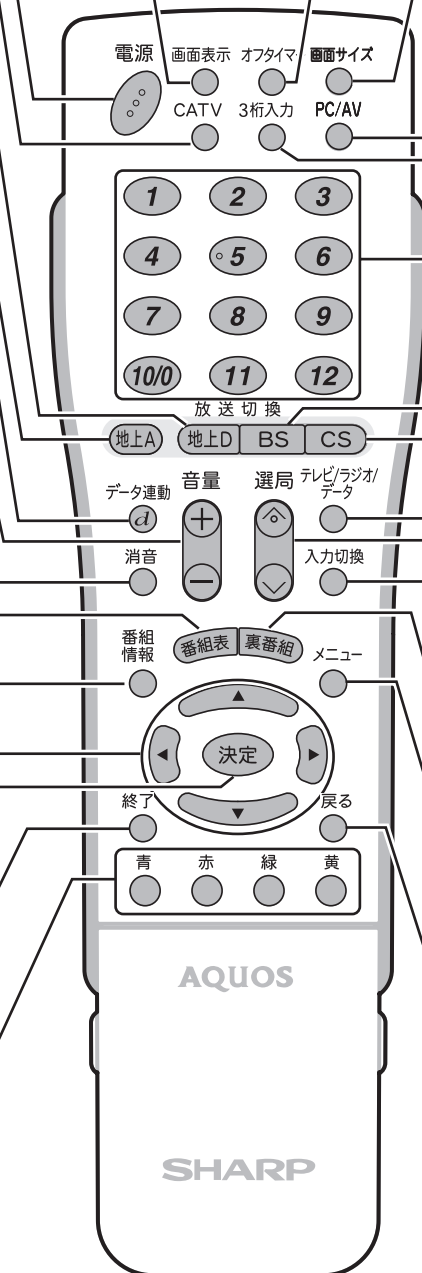

Part Names - Remote Control Unit

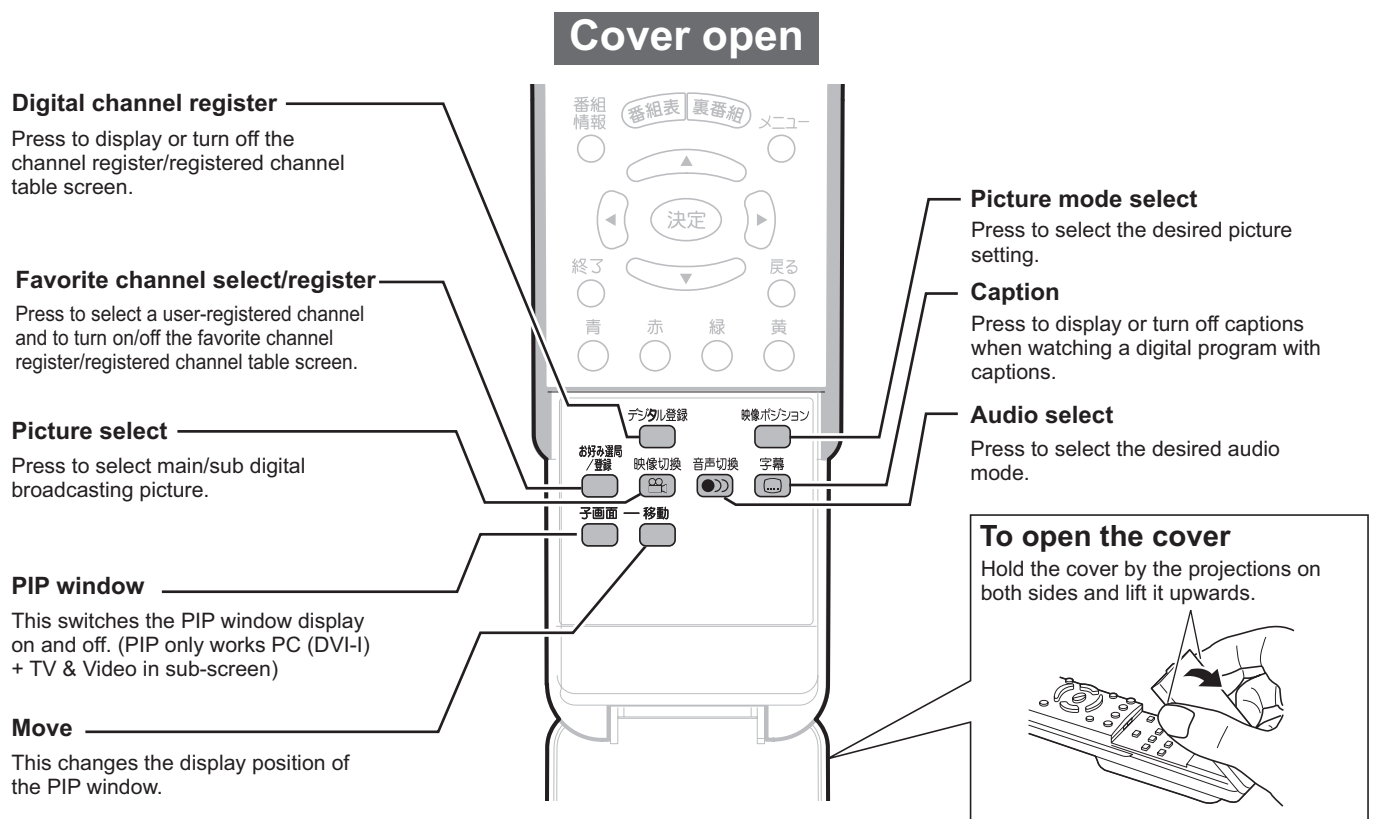

Basic operation for channel selection

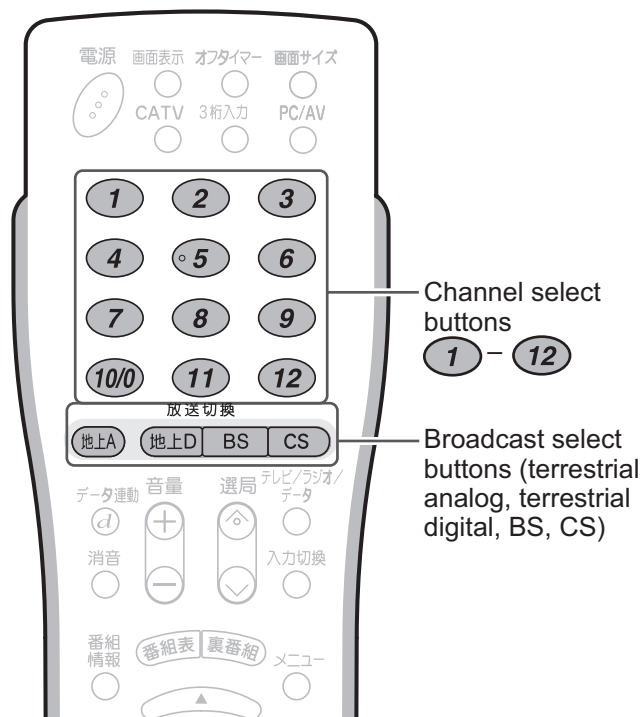

Selecting terrestrial analog (VHF/UHF) channels

- ① Press **地上A** to select terrestrial analog broadcast.
- ② Press **1** - **12** to select the desired channel.

Selecting digital channels

- ① Press **地上D**, **BS** or **CS** to select the desired digital broadcast network.
- ② Press **1** - **12** to select the desired channel.

Types of broadcast

- **地上A** Terrestrial analog: Conventional VHF/UHF broadcast
- **地上D** Terrestrial digital: Terrestrial digital broadcast
- **BS** BS: BS digital broadcast
- **CS** CS: CS 110 digital broadcast